photomultiplier HV Base HV78K20CN series data sheet



description

The HV78K20CN is a compact photomultiplier negative polarity HV Base operating from a low voltage supply (+5 to +15 V). It incorporates a CW multiplier that directly supplies voltages to the photomultiplier electrodes. The HV Base is intended for use with 10-stage, 78mm diameter capped photomultipliers for applications requiring up to -2000 volts and ac or dc coupling.

The unit is housed in a screened cylindrical metal enclosure, the diameter of which is compatible with the photomultiplier overcap. Threaded mounting bushes are provided. The anode output is via a 0.5 m length of shielded RG174U cable.

The photomultiplier operating voltage is set using any one of three programming options as shown in section 8. The anode may be operated at ground potential in the HV78K20CN.

2 applications

The HV78K20CN is designed for use in the following photomultiplier operating modes:

- current measurement (analogue)
- pulsed light
- photon counting


3 features

- compact
- no high voltage cables
- low noise
- linearity limited only by photomultiplier performance
- low power consumption

4 specifications

supply voltage control voltage	V V	+5 +0.1		+15 +2
output high voltage output (anode) current	V µA	-100		-2000 200*
supply current at +5 V; for anode current = 0 μA for anode current = 100 μA	mA mA		1.5 6.5	
supply current at +12 V: for anode current = 0 μA for anode current = 100 μA	mA mA		1	
line regulation anode load regulation:	%/V		5	0.01
for anode current 0 - 100 μA temperature coefficient switch-on time (10 - 90%)	% %/°C		0.0	0.01 0.02
switch-off time (90 - 10%) no pmt	S S		0.2 30	
anode ripple: with 10 kΩ∥20 pF load weight	mV(p-p) g		1 87	


*subject to photomultiplier limit

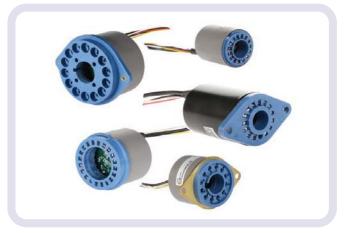

5 ratings


supply voltage	V	4.5	18
control voltage	V	0	3
temperature (operating): at 93% RH, non-condensing	°C	-40	60

6 schematic diagram

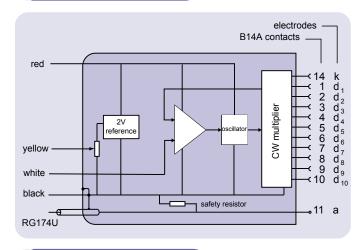


7 voltage distribution

The photomultiplier pin configuration for this HV Base is given below. The voltage distribution for an applied HV of V volts is shown in the table. Note that an anode load resistor is not included. A 10 M Ω safety resistor is connected between anode and ground to ensure that the output is kept at 0 V.

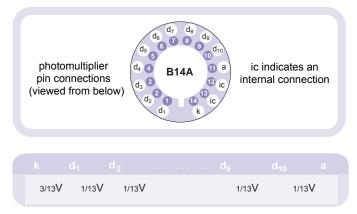


B programming options

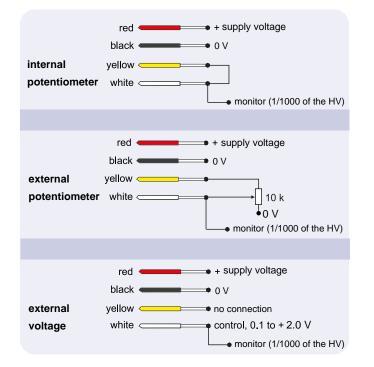

9 dimensions and photomultiplier options

The HV78K20CN series HV base can be used with the following photomultipliers:

9265KB, 9302KB, 9305KB and 9306KB

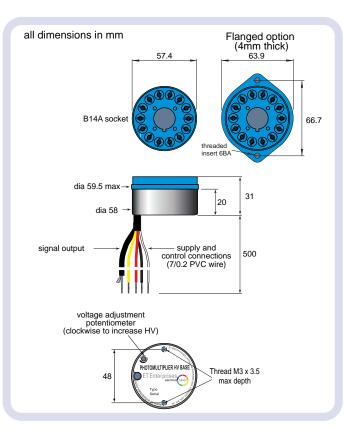

ET Enterprises Limited 45 Riverside Way Uxbridge UB8 2YF United Kingdom tel: +44 (0) 1895 200880 fax: +44 (0) 1895 270873 e-mail: sales@et-enterprises.com web site: www.et-enterprises.com ADIT Electron Tubes 300 Crane Street Sweetwater TX 79556 USA tel: (325) 235 1418 toll free: (800) 399 4557 fax: (325) 235 2872 e-mail: sales@electrontubes.com web site: www.electrontubes.com 10 linearity


Linearity performance is dependent on the particular photomultiplier being used with the HV Base. It is measured as the % deviation in either peak pulse current, or average current, depending on the mode of operation.

Please refer to the corresponding photomultiplier data sheet for further information.


11 output configurations

The pmt anode in the HV78K20CN HV Base is internally grounded via a 10 M Ω safety resistor. Depending on the mode of operation, the output circuitry should be configured externally as shown in the example configurations below. For dc and scintillation applications R_L is typically 100 K Ω , but for fast pulse applications R_L would normally be 50 Ω . In the latter case an internal 50 Ω matching resistor can be fitted (to special order).

a) dc current output



b) dc voltage output



c) ac coupled output

pmt anode safety resistor		customer electronics
	h	

C = external coupling capacitor R_L = external load resistor

12 ordering information

item	ordering code
without flange	HV78K20CN
with flange	HV78K20CNF

13 warning

High voltages generated by these products present an electrical shock hazard and appropriate precautions must be taken.

Installation must be by qualified personnel.

All units are despatched with the internal potentiometer set to zero.

Do not operate outside the quoted ratings of the HV78K20CN or those of the photomultiplier. This may result in loss of performance, permanent damage, or both.



The company reserves the right to modify these designs and specifications without notice. Developmental devices are intended for evaluation and no obligation is assumed for future manufacture. While every effort is made to ensure accuracy of published information the company cannot be held responsible for errors or consequences arising therefrom.

© ET Enterprises Ltd, 2018 DS_ HV78K20CN Issue 2 (24/07/18)